

Deck Side Installation


1. Place the next deck kit up against the assembled deck as pictured below.



2. Install the spreaders against the 1st assembled deck kit



3. Once the rim board is installed on the 2nd deck, screw the two rim joints together to connect the two decks


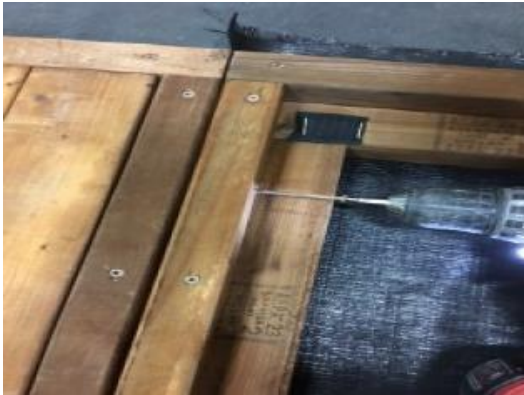


4. Install connector screws as indicated. We recommend a minimum of 6 screws to join the two decks.



Deck End Installation

The rim board comes factory installed, to connect the two decks screw the rim boards together as shown below.

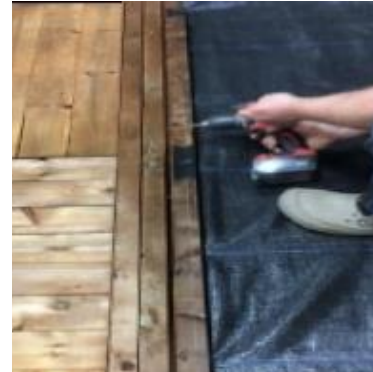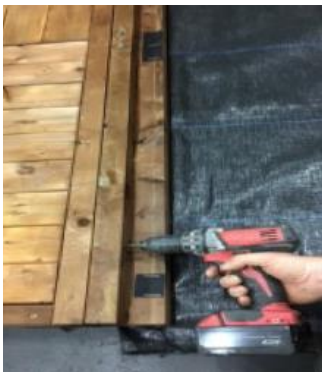

Visit us on the Web @
easideck.com

Call us toll free:
877.455.5961

Email us at:
info@easideck.com