

Patio Deck Assembly Instructions

STOP! Before you assemble the deck make sure you have a flat surface, ideally gravel. If it is to be placed on the lawn, we recommend cutting the grass as short as possible before assembling your new easideck over it.

1. Unroll the deck foundation



2. Install 2 X 4-28" long foundation spreader boards between 2 X 4 foundations sleepers



3. Complete installation of 9, 2 X 4-28" spreader boards as illustrated



4. Install 1st 48" 2 X 2 rim board as illustrated, pre-drilled holes facing up, use supplied 3 inch screws



5. Install the first 2 deck tiles as shown. deck tiles can be installed linear or parquet.




6. Install second 2 X 2 rim board. Place this board with pre-drilled screw holes facing up. Use supplied 3 inch screws.



7. With a hammer install patented clip using 1 X 2 driver provided. Insure the tabs are driven into space between the deck tile boards. This locks the deck tile to the foundation.




8. Screw down patented clip with 1 1/4 inch screws provided.

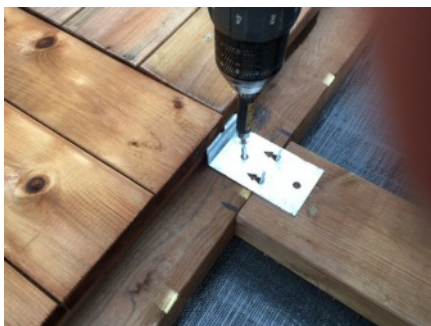

'setting prong'



9. Place 3rd deck tile. Ensure tile is lined up and tight to 2 X 2 rim board. Also lined up over the 'setting prong' of the patented clip.

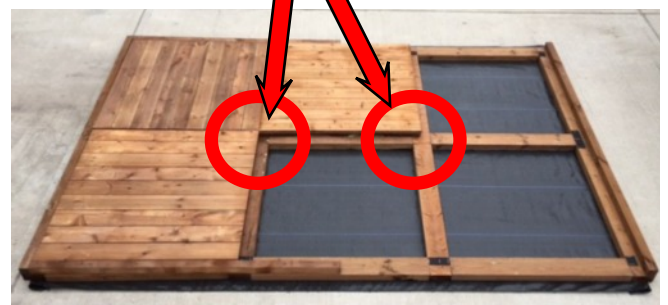

10. Set third deck tile into patented clip 'prong' by using the provided 1 X 2 driver board. You will probably need to hit the driver board several times with the hammer to set the deck tile tight to the foundation.




11. Place 4th deck tile, and repeat step 10 to also set this deck tile onto foundation using the driver board into the patented clip 'prong'.



12. Install 3rd 2 X 2 rim board with 3 inch screws provided.



13. Repeating Step 7 & 8. Set and screw down patented clip with 1/4 inch screws provided.

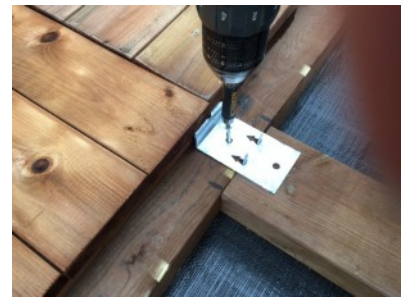

14. Place 5th and 6th deck tiles. Repeat steps 11 and 12 to set these deck tiles onto the foundation, using the driver board hammer into the patented clip 'prong'.




15. Install last rim board using the 3 inch screws provided.



16. Note: Around the perimeter there is a 2" landscape tail, this is for joining deck kits, cut it off or tuck the excess material under the deck.

Now you can enjoy your new **easiDECK** patio deck.

Call Us Toll Free:
1.877.455.5961

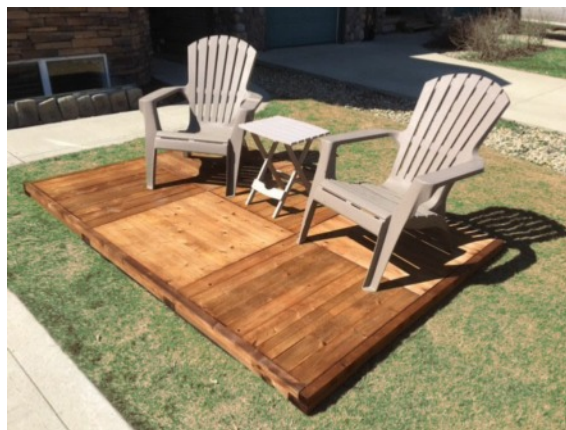

Email:
sales@easideck.com